Extended Rotary Handle For HDQ3S MTSE

User Manual

Standard: IEC60947-6-1

☐ Please carefully read the user manual before installing and operating the products, and then keep it properly for further reference.





Safety Notice

Before installation, operation, maintenance, and inspection, please read this instruction carefully, and install and use this product accurately according to contents of the instruction.



Warning:

- It is forbidden to operate the machine with wet hands.
- It is forbidden to touch conductive parts while the machine is running.
- It is necessary to ensure that the product is not charged when maintaining and repairing.



- Please install and maintain the machine by professionals only.
- Install, debug, and use the machine according to the instruction. When the product is scrapped, please dispose product waste.


Packing List:

No.	Frame	HDQ3S-80	HDQ3S-125	HDQ3S-250
1	Screws	M3.0x35mm 2Pcs	M4X25 mm 2Pcs	M4X30 mm 2Pcs
		M3.0x45 mm 2Pcs	M4X50 mm 2Pcs	M4X65 mm 2Pcs
2	Cover	1 Pcs	1 Pcs	1 Pcs
3	Shaft	1 Pcs 🖘	1 Pcs 득	1 Pcs 득
4	Handle	1 Pcs	1 Pcs	1 Pcs




Installation extended rotary handle.

Step 1

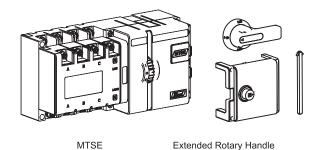


Step 2

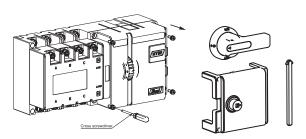

Put MTSE on OFF position Remove 4 set screws from MTSE



Step 3

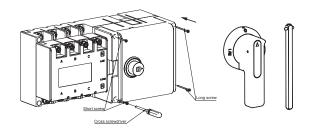


Confirm the Arrow on OFF position, fixed with screw (Lift shoter, Right longer)

The recommended installation torque of screws

Frame	HDQ3S-80	HDQ3S-125	HDQ3S-250
torque (N.m)	0.6-0.9	1.2-1.7	1.2-1.7



Step 4

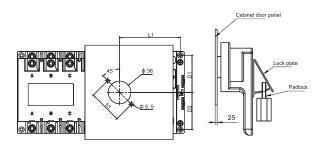


Extended rotary handle installation position and dimensions Door can be open only OFF position Extended rotary handle safety padlock

Dimensions (mm):

Frame	HDQ3S-80	HDQ3S-125	HDQ3S-250
L1	97	96.4	121.8
D1	48.5	59	77.5
D2	48.5	59	77.5



Step 5

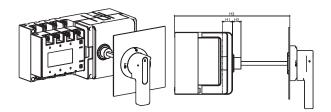

Installation complete.

Dimensions (mm)

Fram	е	HDQ3S-80	HDQ3S-125	HDQ3S-250
H1		24	22	28.5
H2		18		
112	Min	140	150	170
H3	Max	390	400	420

The recommended operating torque of the handle

Frame	HDQ3S-80	HDQ3S-125	HDQ3S-250
torque (N.m)	6-8	8-12	10-14